

## Addendum

The RS-485 connector has changed and is different from the illustration in the manual. Please refer to the pinouts below for connecting the RS-485 wiring.

